

# Final Check out

**Always disconnect electrical power to the machine before opening the top. Avoid contact with capacitor or other electrical terminals.**

**Open the top of the machine as follows:**

- Remove the four screws that hold the dispenser to the top panel.
- Unlock the top panel, slide to the rear to release and remove the top panel from the machine.

## Setting the Accumulator

**Always disconnect electrical power to the machine before setting the accumulator. Avoid contact with capacitor or other electrical terminals.**


The accumulator board contains the digital coin count and time remaining display and is attached to the front of the machine. The **amount to start** is set by depressing the 6 small switches on the top edge of the accumulator in the correct combination for the desired number of coins. The **time remaining** is set by depressing the other six small switches on the top edge of the accumulator in the correct combination for the desired cycle time. (See chart for correct combinations) The switch numbers and names are printed on the clear cover over the coin accumulator circuit board. The switches are actuated by pushing the switch lever toward the back of the machine. As the switches are very small, a golf tee or some other nonmetallic tool is desirable for this process.

**Note:** For use in Canada, the coin acceptor magnet must be removed. See drop coin acceptor in Service Procedures Section for location of magnet.

Number of Coins or Minutes

Switch Number

	1	2	3	4	5	6
1	X					
2		X				
3	X	X				
4			X			
5	X		X			
6		X	X			
7	X	X	X			
8				X		
9	X			X		
10					X	
11	X					X
12		X				X
13	X	X				X
14			X			X
15	X		X			X
16		X	X			X
17	X	X	X			X
18				X		X
19	X			X		X
20						X
21	X					X
22		X				X
23	X	X				X
24			X			X
25	X		X			X
26		X	X			X
27	X	X	X			X
28				X		X
29	X			X		X
30					X	X
31	X				X	X
32		X			X	X
33	X	X			X	X
34			X		X	X
35	X		X		X	X
36		X	X		X	X
37	X	X	X		X	X
38				X	X	X
39	X			X	X	X

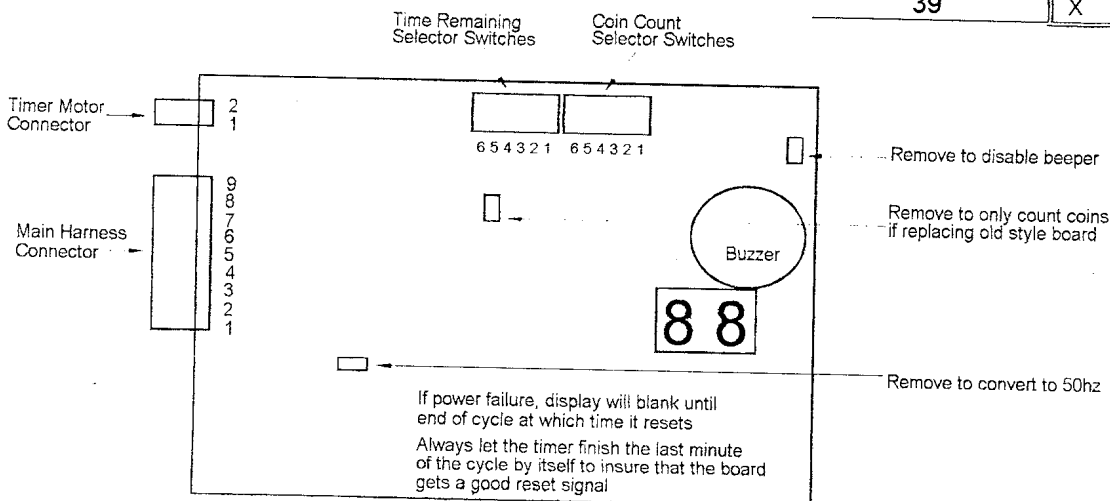

# OPERATING INSTRUCTIONS

## ACCUMULATOR

Prior to operation the machine owner should set the accumulator. The setting procedure sets both the coin count and the digital coin display.

**Always disconnect electrical power to the machine before setting the accumulator. Avoid contact with capacitor or other electrical terminals.**

### 1. Open the top of the machine as follows:

- A. Remove the four screws that hold the dispenser to the top panel.
- B. Unlock the top panel.
- C. T400— Swing the hinged top panel up and back.  
T600— Remove the top panel from the machine.

### 2. Setting the Accumulator

The accumulator board contains the digital count down display and is attached to the front of the machine. The accumulator is set by depressing the 6 small switches on the top edge of the accumulator in the correct combination for the desired number of coins. (Switch #1 is the right hand switch viewed from the front of the machine. The switches numbers are also printed on the clear cover over the coin accumulator circuit board.) The switches are actuated by pushing the switch operator toward the back of machine. As the switches are very small, a golf tee or some other nonmetallic tool is desirable for this process. The following chart (also included in owners information) gives the correct switch combinations for different coin insertions.

		NUMBER OF COINS																				
		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
SWITCH NO.	1	X		X		X		X		X		X		X		X		X		X		
	2		X	X			X	X					X	X			X	X				
	3				X	X	X	X							X	X	X	X				
	4								X	X										X	X	
	5																					X
	6											X	X	X	X	X	X	X	X	X	X	

**NOTE:** For use in Canada, the coin acceptor magnet must be removed.

- A. Disconnect power
- B. Remove the coin acceptor. Remove the small cylindrical magnet which is visible from the side and is held by a set screw.
- C. Reassemble the coin acceptor.