

## SETTING THE ACCUMULATOR

1. Always disconnect electrical power to the machine before adjusting the accumulator.
2. Remove the washer top panel and locate the accumulator circuit board at the top of the right side as you face the machine.
3. The adjustment is made by setting the 6 small numbered switches in the correct combination. The switches are actuated by pushing through the flexible cover on the numbered side of the switch operator. Do not use a sharp object or the cover will be punctured. To deactivate the switch, push the unnumbered side. The switch combinations for 1 to 20 coin are shown below.
4. Replace the top panel and reconnect power.

NUMBER OF COINS

		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	
SWITCH NO.	1	X		X		X		X		X		X		X		X		X		X		
	2		X	X			X	X			X	X			X	X			X	X		
	3				X	X	X	X					X	X	X	X						X
	4								X	X	X	X	X	X	X	X						
	5																	X	X	X	X	X
	6																					

### (CANADIAN COINS)

For use with Canadian coins, the coin acceptor should have the magnet removed.

1. Disconnect power.
2. Remove the coin acceptor and knock out the small cylindrical magnet which is visible from the side.
3. Reinstall the coin acceptor and reestablish power.

### REMOVAL — SERVICING OF COIN ACCUMULATOR

The complete coin accumulator assembly is fastened to the right side panel with two screws.

The transformer, accumulator board and mounting hardware are serviceable as separate components or the complete accumulator assembly is available. Refer to Figure 4-13 for parts identification.