




COMMERCIAL ELECTRIC DRYER

MODELS:

CSP2860TQ0 (White)


CONTROL PANEL AND SEPARATOR PARTS

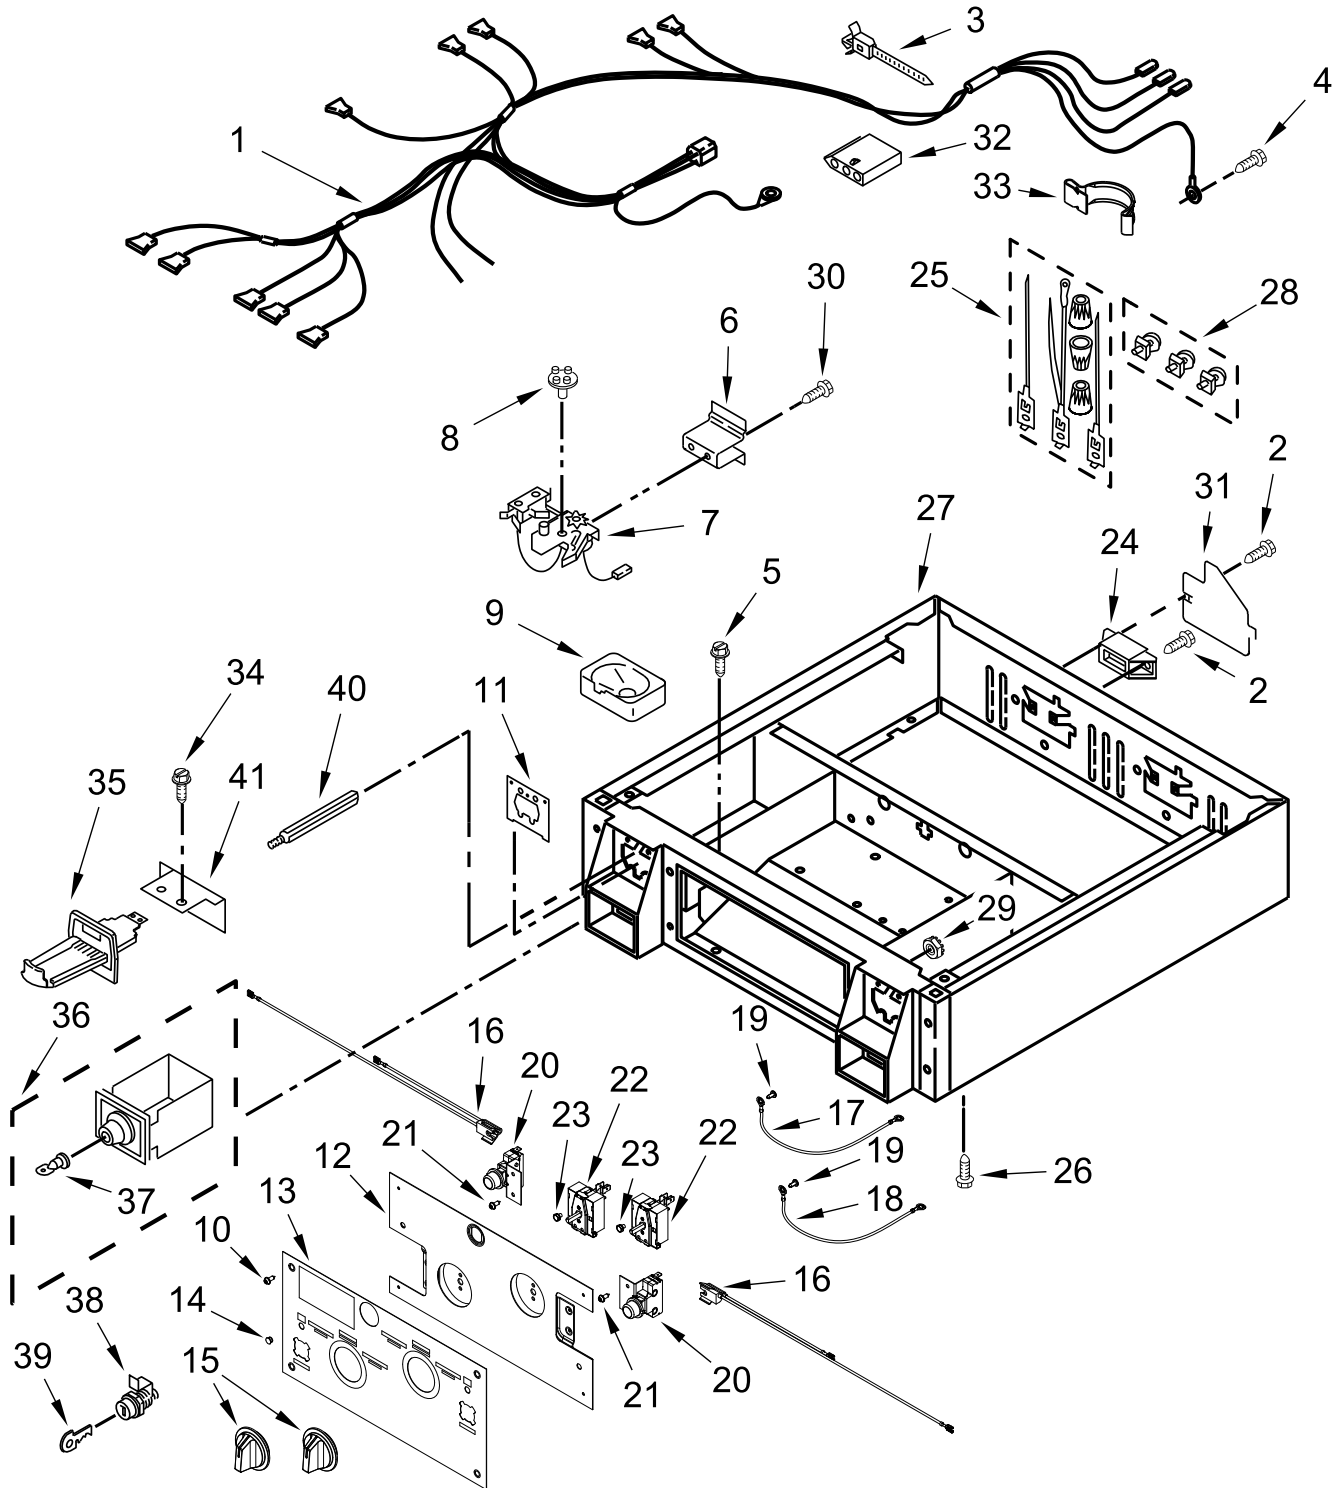

CONTROL PANEL AND SEPARATOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10702045	Harness, Wire	18	3401699	Jumper, Wire (Ground)	34	96435	Screw
2	3400000	Screw	19	303921	Screw	35	8316520	Coin Chute
3	3391018	Tie, Cable	20	W10488054	Switch, PTS		8316264	Insert - Blank
4	8533974	Screw	21	3348629	Screw		8316265	Insert - 25 Cent
5	98139	Screw	22	W10327105	Switch, Cycle Selection	36	8316525	Money Box W/Lock
6	3390115	Bracket, Timer	23	W10139100	Screw	37		Key (Money Box) (When Ordering, Specify Vendor and Key Number)
7	3389668	Timer	24	3397659	Block, Terminal	38	8316526	Assembly, Cam & Security Lock
8		Cam	25	279318	Terminal, Brass and Tinned (Includes Terminal Block Screw Kit)	39		Key (Service Door) (When Ordering, Specify Vendor and Key Number)
	3387974	Timing Cam, 3-Pin (60 Minutes)	26	3400500	Bolt	40	8318517	Bolt, Slide Mechanism
	343777	Timing Cam, 6 Pin (30 Minutes)	27	3978853	Collar	41	3390424	Extension, Slide Coin Mech. Parts May Be Ordered From Whpl or Vendor Below ESD 270 New Jersey Dr. Fort Washington, PA 19034 1-800-523-1510 info@esdcoin.com
9	385421	Funnel, Coin	28	279393	Screw Kit, Terminal Block			
10	W10386302	Screw	29	3400029	Nut			
11	3954761	Plate, Adapter	30	3400094	Screw			
12	W10684161	Panel, Control	31	3396795	Cover, Terminal Block			
13	W10684157	Fascia Assembly	32	3936144	Connector, 3-Circuit			
14	W10133502	Indicator Lights Assembly	33	98997	Clip			
15	W10492415	Knob			Following Parts Optional			
16	W10130072	Lamp, Indicator						
17	8539882	Jumper Wire						


LOWER CABINET AND FRONT PANEL PARTS

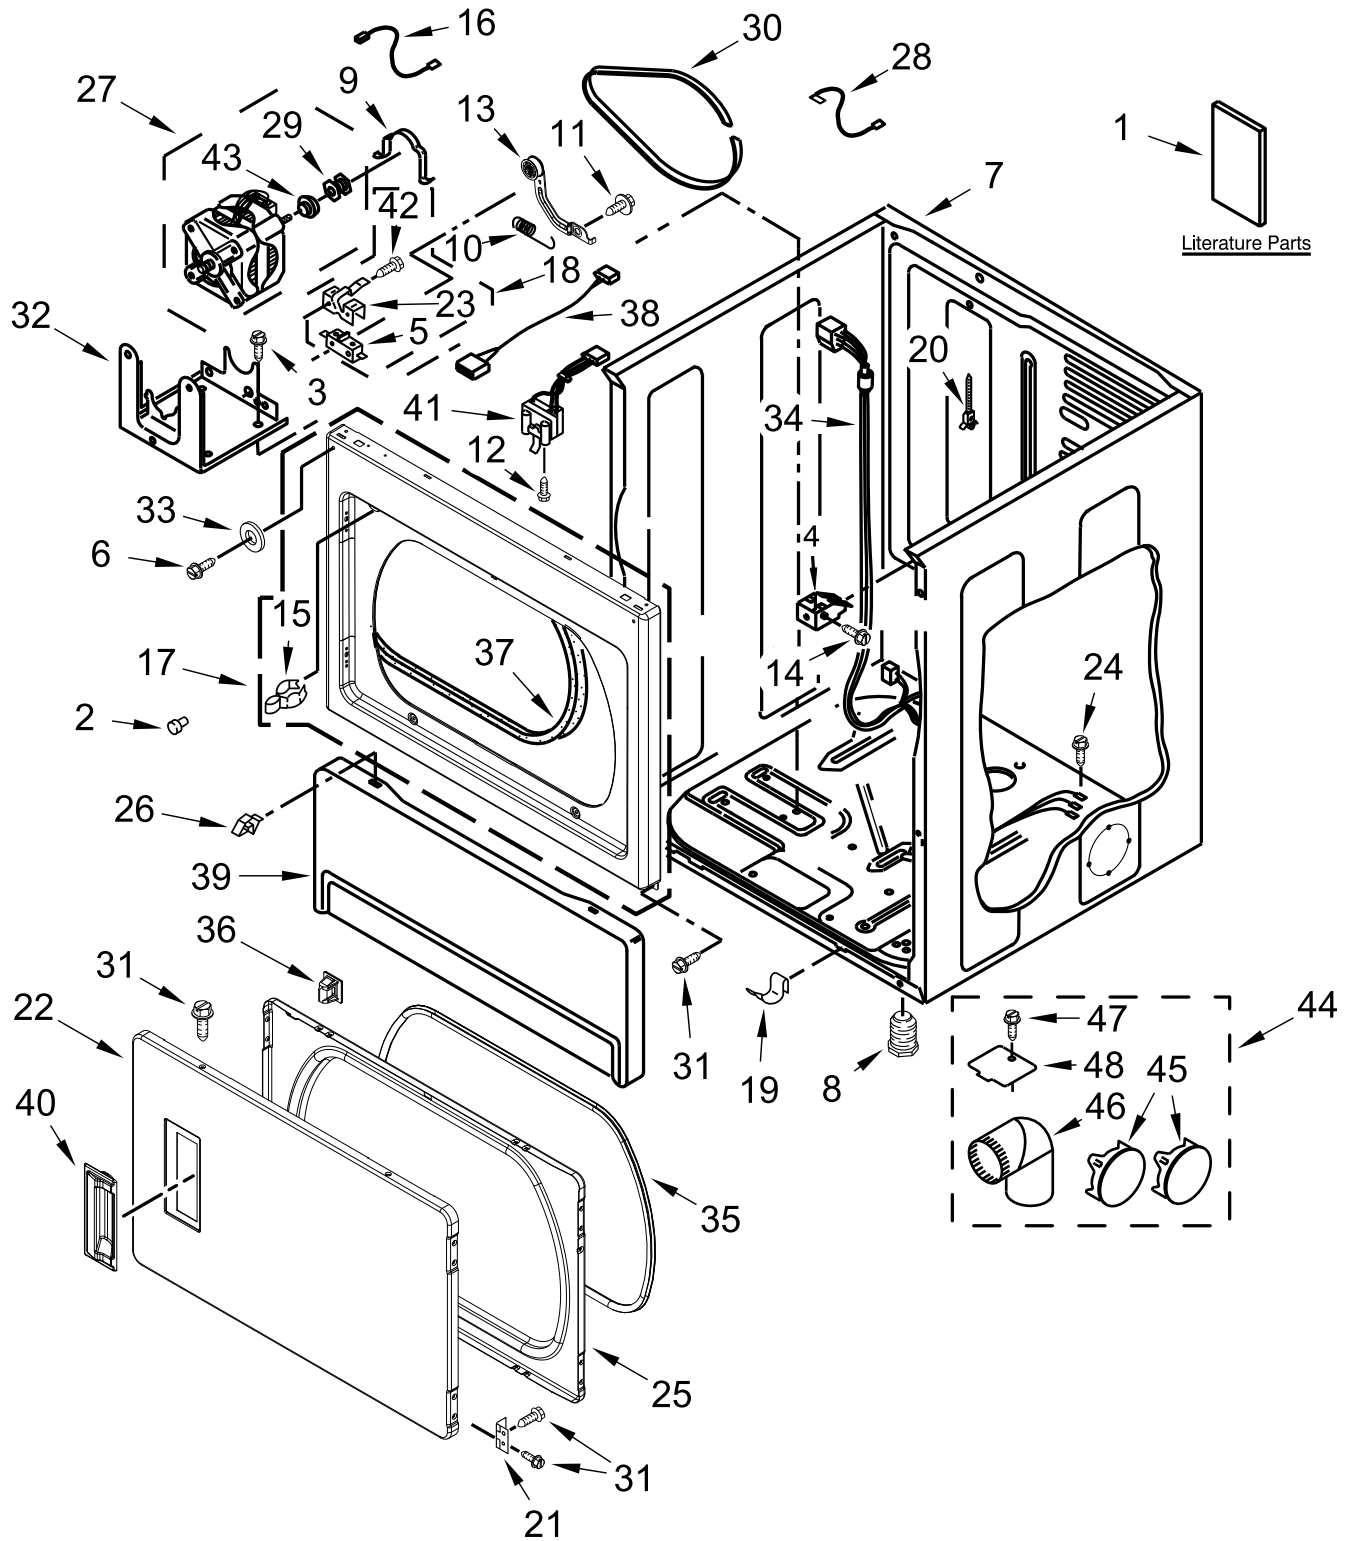

LOWER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts (Located Behind Toe Panel)	17	W10234293	Panel, Front	36	3392538	Assembly, Door Catch
	W10761037	Installation Instructions	18	8066134	Switch Assembly	37	3387242	Seal, Front Panel
	W10738554	Wiring Diagram	19	W10291934	Clip	38	8283298	Jumper, Door Switch
2	693152	Bumper	20	3391018	Tie, Cable	39		Panel, Toe
3	3390663	Screw	21		Hinge & Pin Assembly		697215	White
4	3391846	Clip, Front Panel		W10279703	Silver	40	W10116360	Handle, Door
5	3394881	Switch - Belt	22	W10322546	Door, Front	41	3406109	Switch, Door
6	3400077	Screw	23	8066120	Lever Switch	42	98129	Screw
7		Cabinet	24	3390647	Screw	43	3393657	Restrainer, Belt
	W10547697	White	25	W10323061	Door, Rear	44		Optional Parts Not Included Dryer Exhaust Kit (For Side & Bottom Venting)
8	3392100	Foot, Dryer	26	3388229	Retainer		279818	White
9	660658	Clamp, Motor	27	W10396031	Motor			Multivent Plug
10	W10446781	Spring, Idler	28	3398948	Wire, Jumper (Broken Belt Switch)	45	697750	White
11	3389420	Screw	29	3394341	Pulley, Motor	46	49026	Elbow
12	697773	Screw	30	3387610	Belt, Drive	47	488729	Screw
13	W10344193	Pulley-Idler Assembly	31	342055	Screw	48	3394331	Plate, Cover
14	3391915	Screw	32	3387118	Bracket, Motor			
15	696144	Strike, Door	33	3392186	Washer			
16	W10167612	Wire, Belt Switch	34	W10702043	Harness			
			35	3390735	Seal, Door			


UPPER CABINET AND FRONT PANEL PARTS

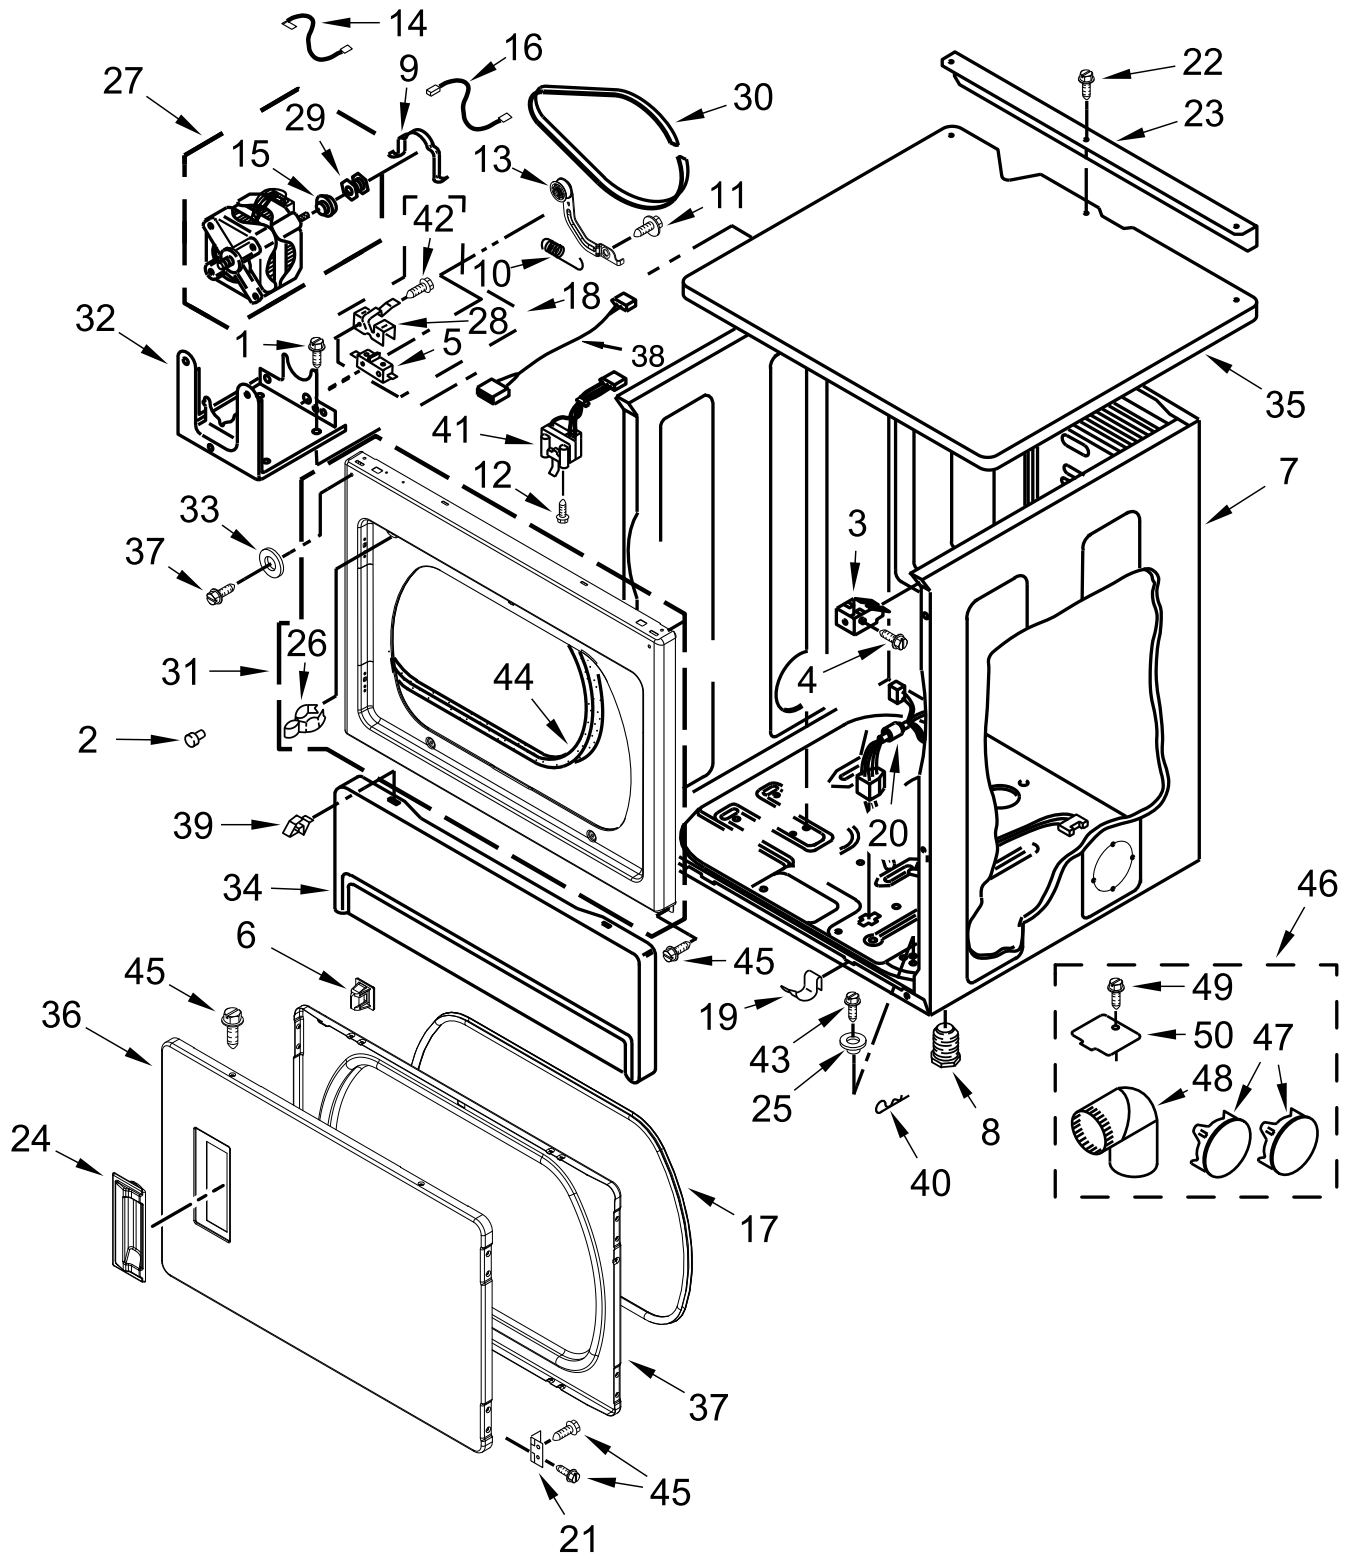

UPPER CABINET AND FRONT PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3390663	Screw	19	W10291934	Clip	37	W10323061	Door, Rear
2	693152	Bumper	20	W10702043	Harness	38	8283298	Jumper, Door Switch
3	3391846	Clip, Front Panel	21		Hinge & Pin Assembly	39	3388229	Retainer
4	3391915	Screw		W10279703	Silver	40	W10117347	Cotter Pin
5	3394881	Switch - Belt	22	3390647	Screw	41	3406109	Switch, Door
6	3392538	Assembly, Door Catch	23	3979115	Bracket, Angle	42	98129	Screw
7		Cabinet	24	W10116360	Handle, Door	43	3400523	Bolt, Security
	W10547697	White	25	3389233	Bushing	44	3387242	Seal, Front Panel
8	689172	Foot, Dryer Plastic	26	696144	Strike, Door	45	342055	Screw
			27	W10396031	Motor	46		Optional Parts Not Included Dryer Exhaust Kit (For Side & Bottom Venting)
9	660658	Clamp, Motor	28	8066120	Lever Switch		279818	White
10	W10446781	Spring, Idler	29	3394341	Pulley, Motor	47		Multivent Plug
11	3389420	Screw	30	3387610	Belt, Drive		697750	White
12	697773	Screw	31	W10234293	Panel, Front	48	279731	Elbow (4")
13	W10344193	Pulley-Idler Assembly	32	3387118	Bracket, Motor	49	488729	Screw
14	3398948	Wire, Jumper (Broken Belt Switch)	33	3392186	Washer	50	3394331	Plate, Cover
15	3393657	Restrainer, Belt	34		Panel, Toe			
16	3394881	Switch - Belt		697215	White			
17	3390735	Seal, Door	35		Top			
18	8066134	Switch Assembly		3389351	White			
			36	W10322546	Door, Front			

UPPER AND LOWER BULKHEAD PARTS

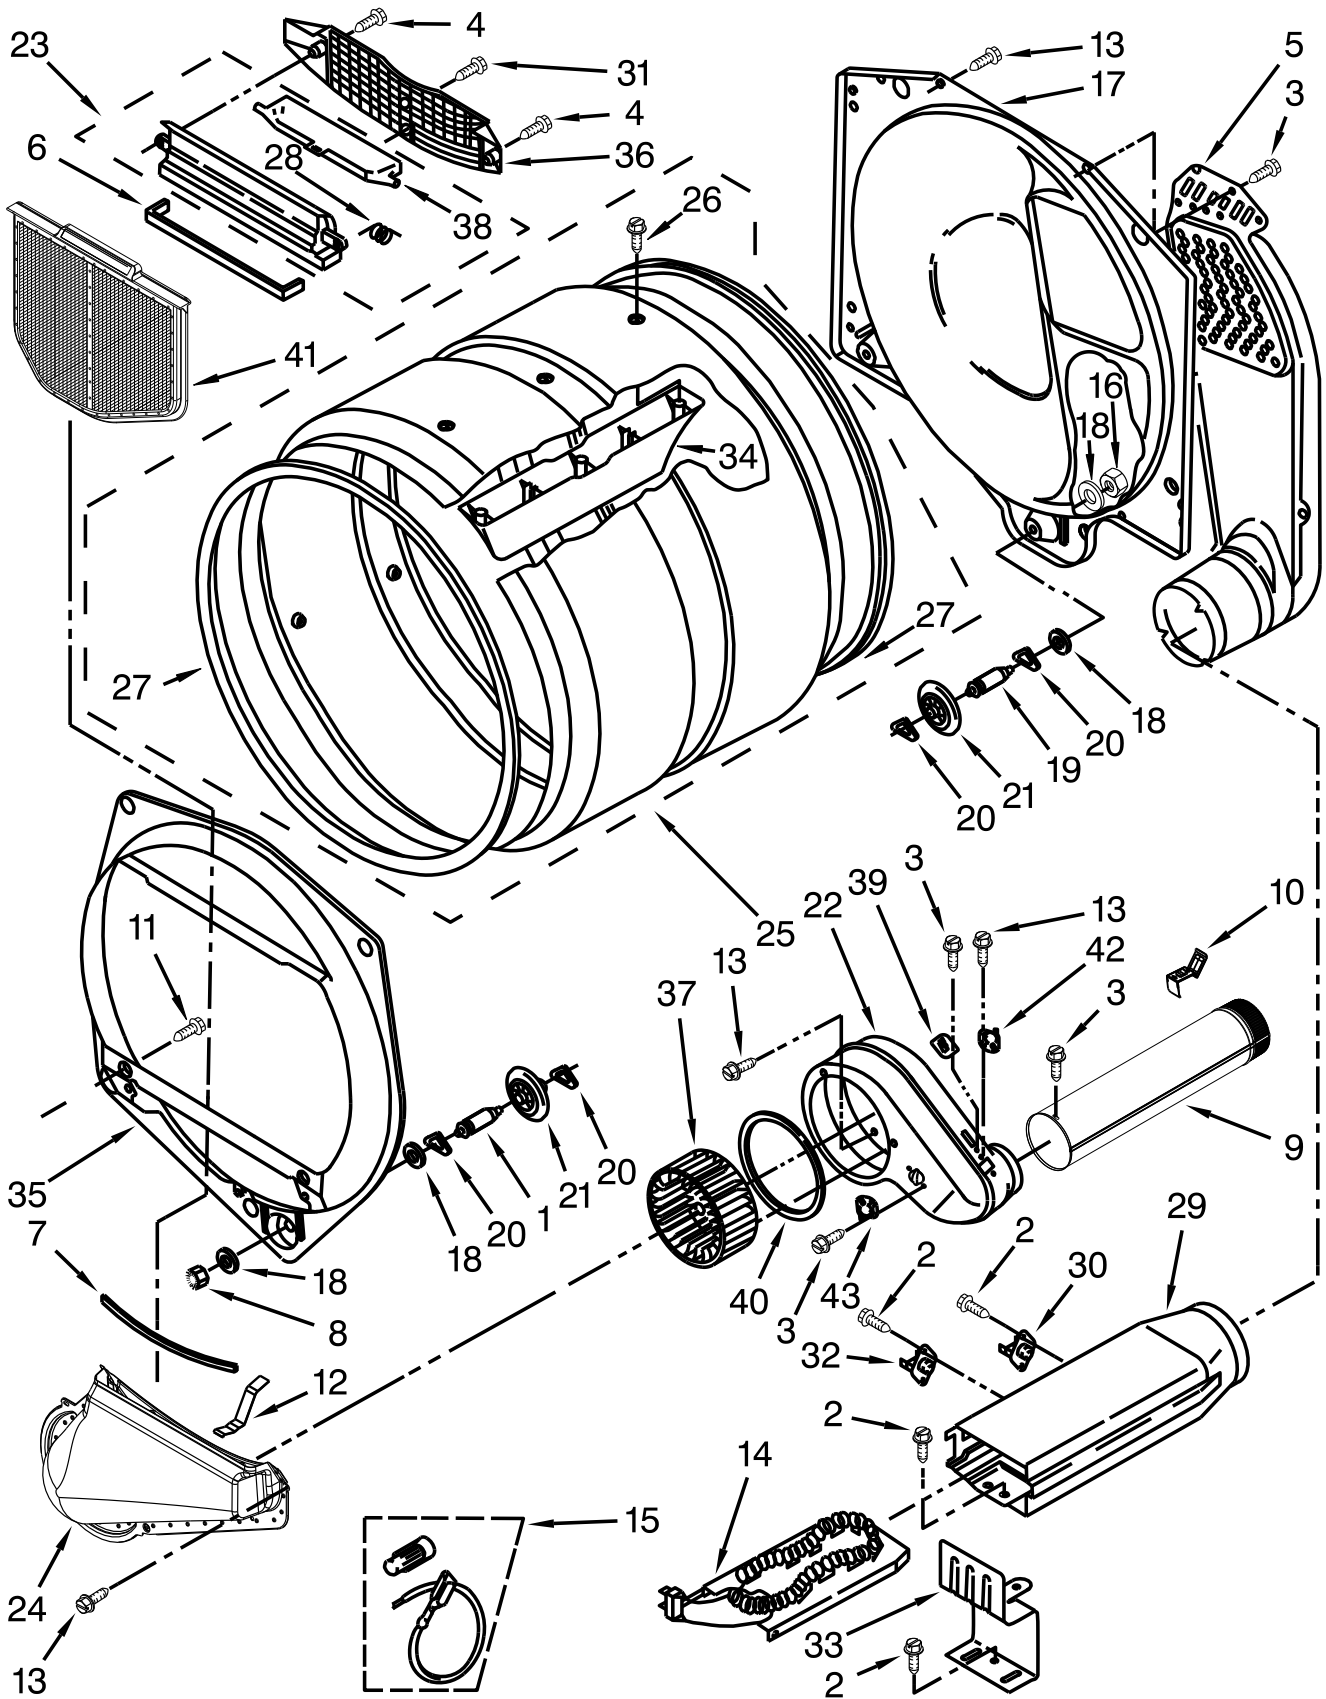

UPPER AND LOWER BULKHEAD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10359271	Shaft, Drum Roller - Right Hand Thread	17	3387809	Bulkhead, Rear	32	3391914	Thermostat HL-295/215
2	90767	Screw	18	3387459	Washer	33	8066099	Bracket, Heater Box
3	8533971	Screw	19	W10359272	Shaft, Drum Roller - Left Hand Thread	34	697693	Baffle, Drum
4	3387230	Screw	20	W10512946	Washer, Tri Ring	35	697557	Bulkhead, Front
5	697354	Assembly, Air Duct	21	W10314171	Roller, Support	36	W10692558	Grill, Outlet
6	697813	Seal, Outlet Housing	22	8544362	Housing, Blower	37	W10349492	Wheel, Blower
7	697814	Seal, Drum Front	23	W10685669	Assembly, Outlet Housing	38	W10685668	Door, Lint Screen
8	3934666	Nut, Hex	24	8066168	Assembly, Lint Duct	39	3392519	Fuse, Thermal (91C)
9	8066224	Pipe, Exhaust	25	W10545923	Assembly, Drum	40	697770	Seal, Plate Cover
10	8572105	Clip, Exhaust	26	W10219342	Screw	41		Screen, Lint
11	3357011	Screw	27	W10521118	Seal, Drum		W10596627	White
12	W10345456	Clip, Spring	28	3394986	Spring, Lint Screen Door	42	W10131836	Thermostat
13	3390647	Screw	29	W10608837	Assembly, Weld Heater Box	43	W10193019	Thermostat, Electronic (155F)
14	3387748	Element, Heater	30	8318314	Kit, Thermal Cut-Off (Includes High Limit Thermostat)			
15	279457	Terminal Wire Kit (For Heater Element Wiring Harness Repair)	31	695240	Screw			
16	W10001120	Nut, Hex (Left Hand Thread)						

OPTIONAL PARTS (NOT INCLUDED)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	4392067	Kit, Dryer Repair
	285875	Kit, Security
	8522199	Kit, Dryer Vent Testing

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	350938	Gray Primer

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White