




LOWER CABINET AND FRONT PANEL PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

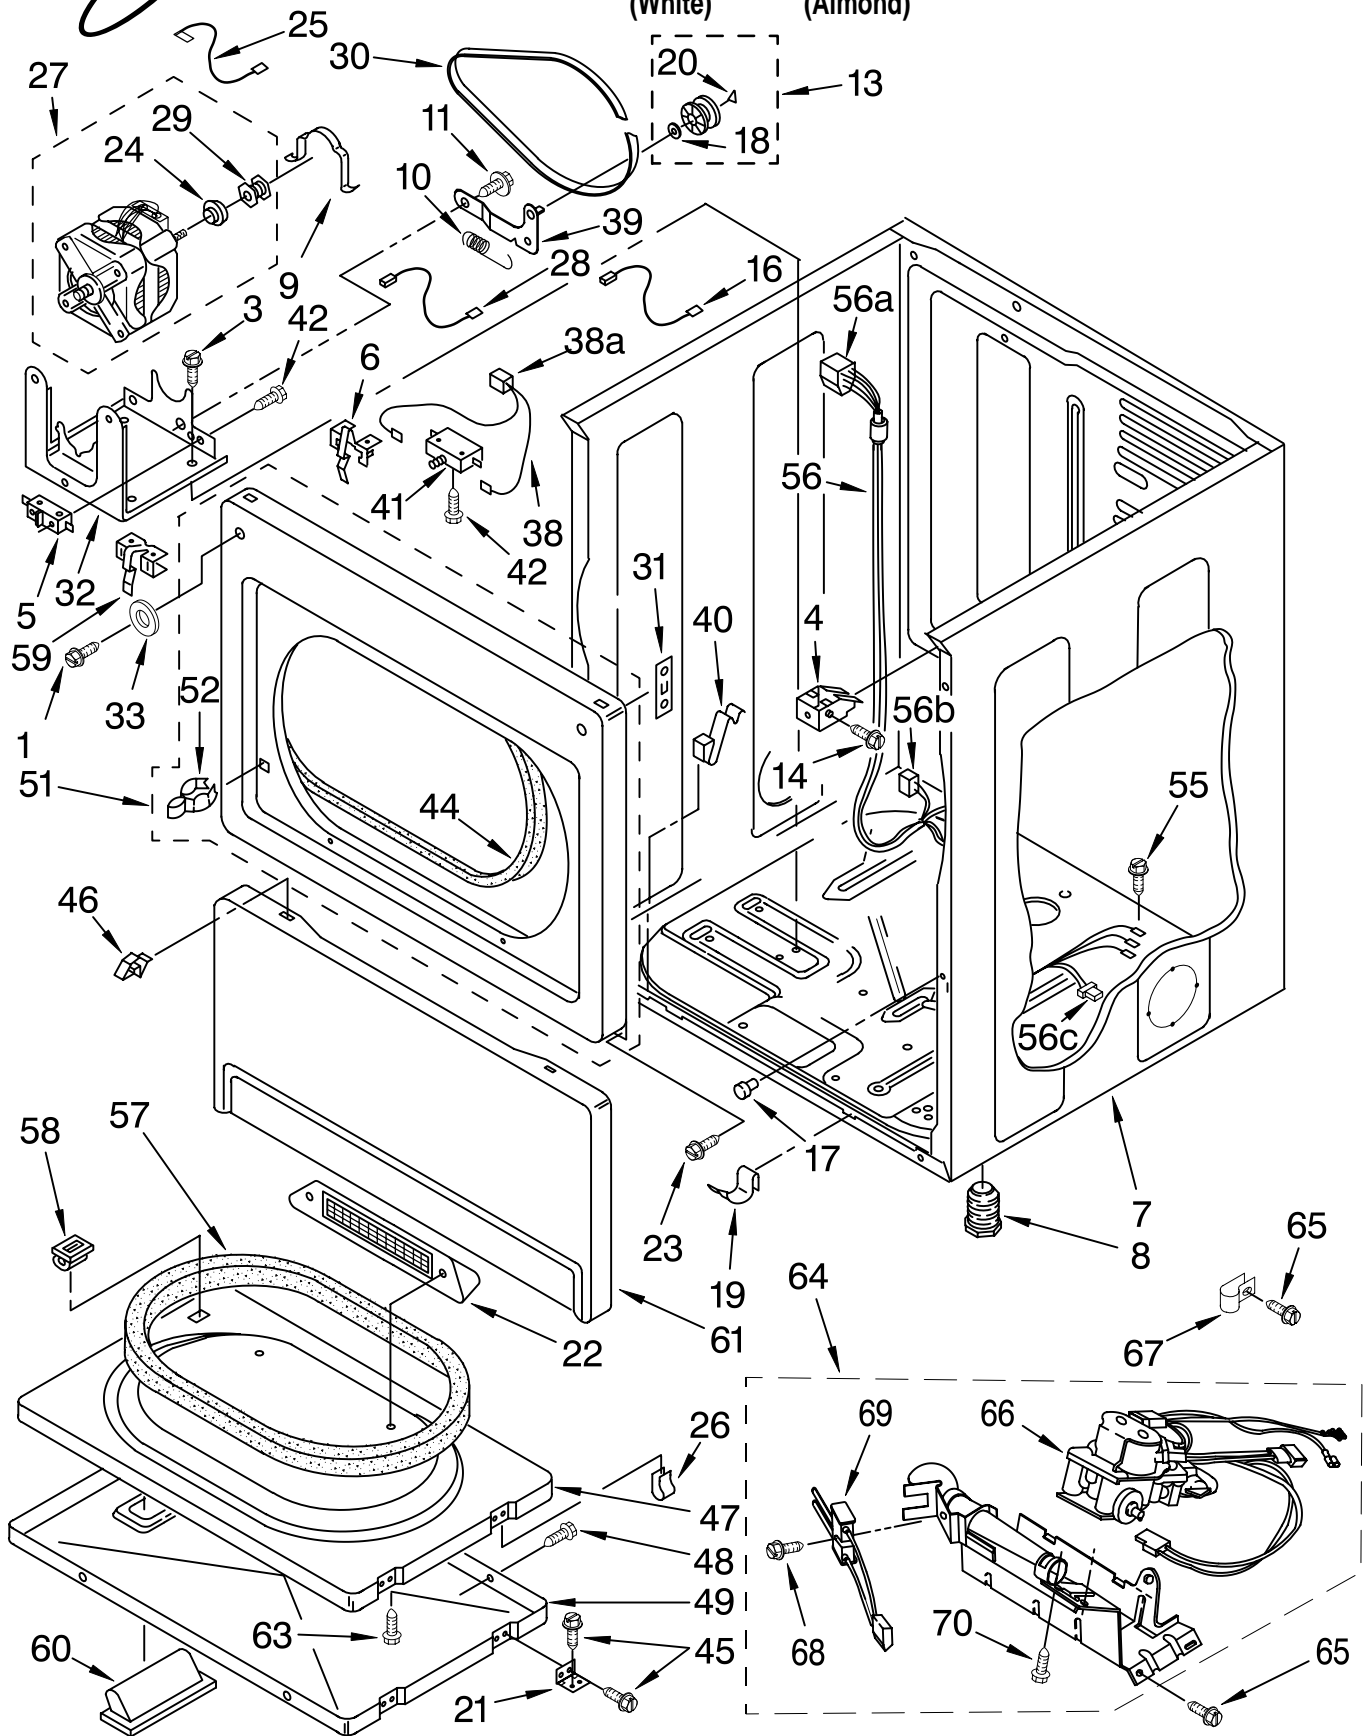


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

LOWER CABINET AND FRONT PANEL PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3393008	Screw (2)	28	3394081	Wire, Jumper	56B	717252	Receptacle (Uses Terminals 94614 Or 94613)
3	3390663	Screw, 10-16 x 1/2	29	3389627	Pulley 60 Hz	56C	691707	Receptacle, 3-Way (Uses Terminal 94614)
4	3391846	Clip, Front Panel (2)	30	661570	Belt, Drive	57	3390735	Seal, Door
5	3394881	Switch, Broken Belt	31	3390902	Clip, Door Hinge (2)	58	3392538	Catch, Door Assembly
6	691581	Lever, Door Switch	32	3387118	Bracket, Motor	59	3391408	Lever, Snap Switch
7		Cabinet, Lower	33	3392186	Washer	60		Handle, Door
	3402264	White	38	3389967	Harness, Door Switch		3389522	White
	3402265	Almond	38A	717253	Plug, 2-Way (Uses Terminal 94613)		3389523	Almond
8	3392100	Foot, Dryer (Plastic) (4)	39	3388674	Bracket, Idler	61		Panel, Toe
9	660658	Clamp, Motor (2)	40	3388600	Clip, Lint Duct		697215	White
10	3387374	Spring, Idler	41	347207	Switch, Door (Includes Illus. No. 6)		697216	Almond
11	3389420	Retainer, Idler	42	98129	Screw,	63	697777	Screw, 11-16 x 7/8
13	3388672	Pulley Assembly	44	3387242	Seal, Front Panel	64	3401797	Burner Assembly 60 Hz. (Refer To Page 9 For Further Breakdown)
14	3393258	Screw, 10-12 x 1	45	342055	Screw, 10-32 x 1/2	65	3390647	Screw, 8-18 x 1/2
16	3394081	Wire, Belt Switch	46	3388229	Retainer	66	3401775	Valve, Gas (Complete) 60 Hz
17	693152	Bumper	47	3393681	Door, Rear	67	3387561	Clamp, Pipe
18	233520	Washer, Thurst	48	694091	Screw	68	3393909	Screw, 8-32 x 5/8
19	297092	Clip (2)	49		Door, Front	69	686590	Ignitor
20	690997	Tri-Ring		3387872	White	70	3387057	Screw, 8-18 x 3/8 (3)
21	3389247	Hinge And Pin (2)		3387873	Almond			
22	3391611	Grill	51		Upper Front Panel			
23	3393258	Screw, 10-16 x 1/2		3393081	White			
24	3393657	Restrainer, Belt		3393082	Almond			
25	3398948	Wire, Jumper	52	696144	Strike, Door			
26	3389249	Nut, "U" (4)	55	3390647	Screw, No. 8 x 1/2			
27	3395656	Motor Assembly (60 Hz.) (Nos. 24 & 29 Not Included With Motor)	56	3401106	Harness (Lower)			
			56A	3390423	Plug, Multi- Terminal (Uses Terminals 94613)			

OPTIONAL PARTS (NOT INCLUDED)

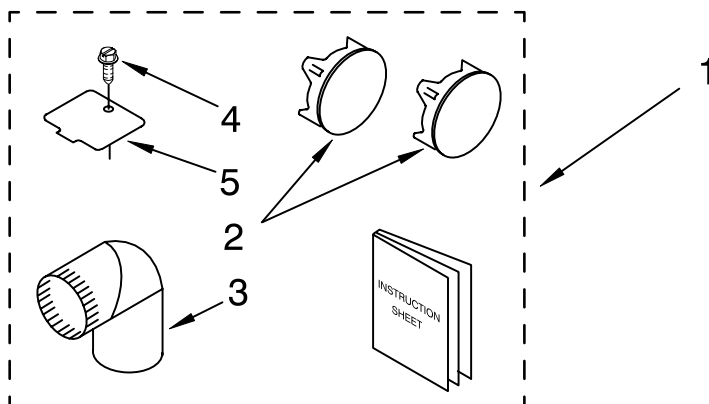

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

Optional Parts Not Included


Dryer Exhaust Kit
(For Side & Bottom Venting)

1	279818	White
	279819	Almond
2		Plug, Multivent
	697750	White
	697751	Almond
3	279731	4"- 90 ° Elbow
4	488729	Screw
5	3389808	Plate, Cover (Bottom Exhaust)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL AND SEPARATOR PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

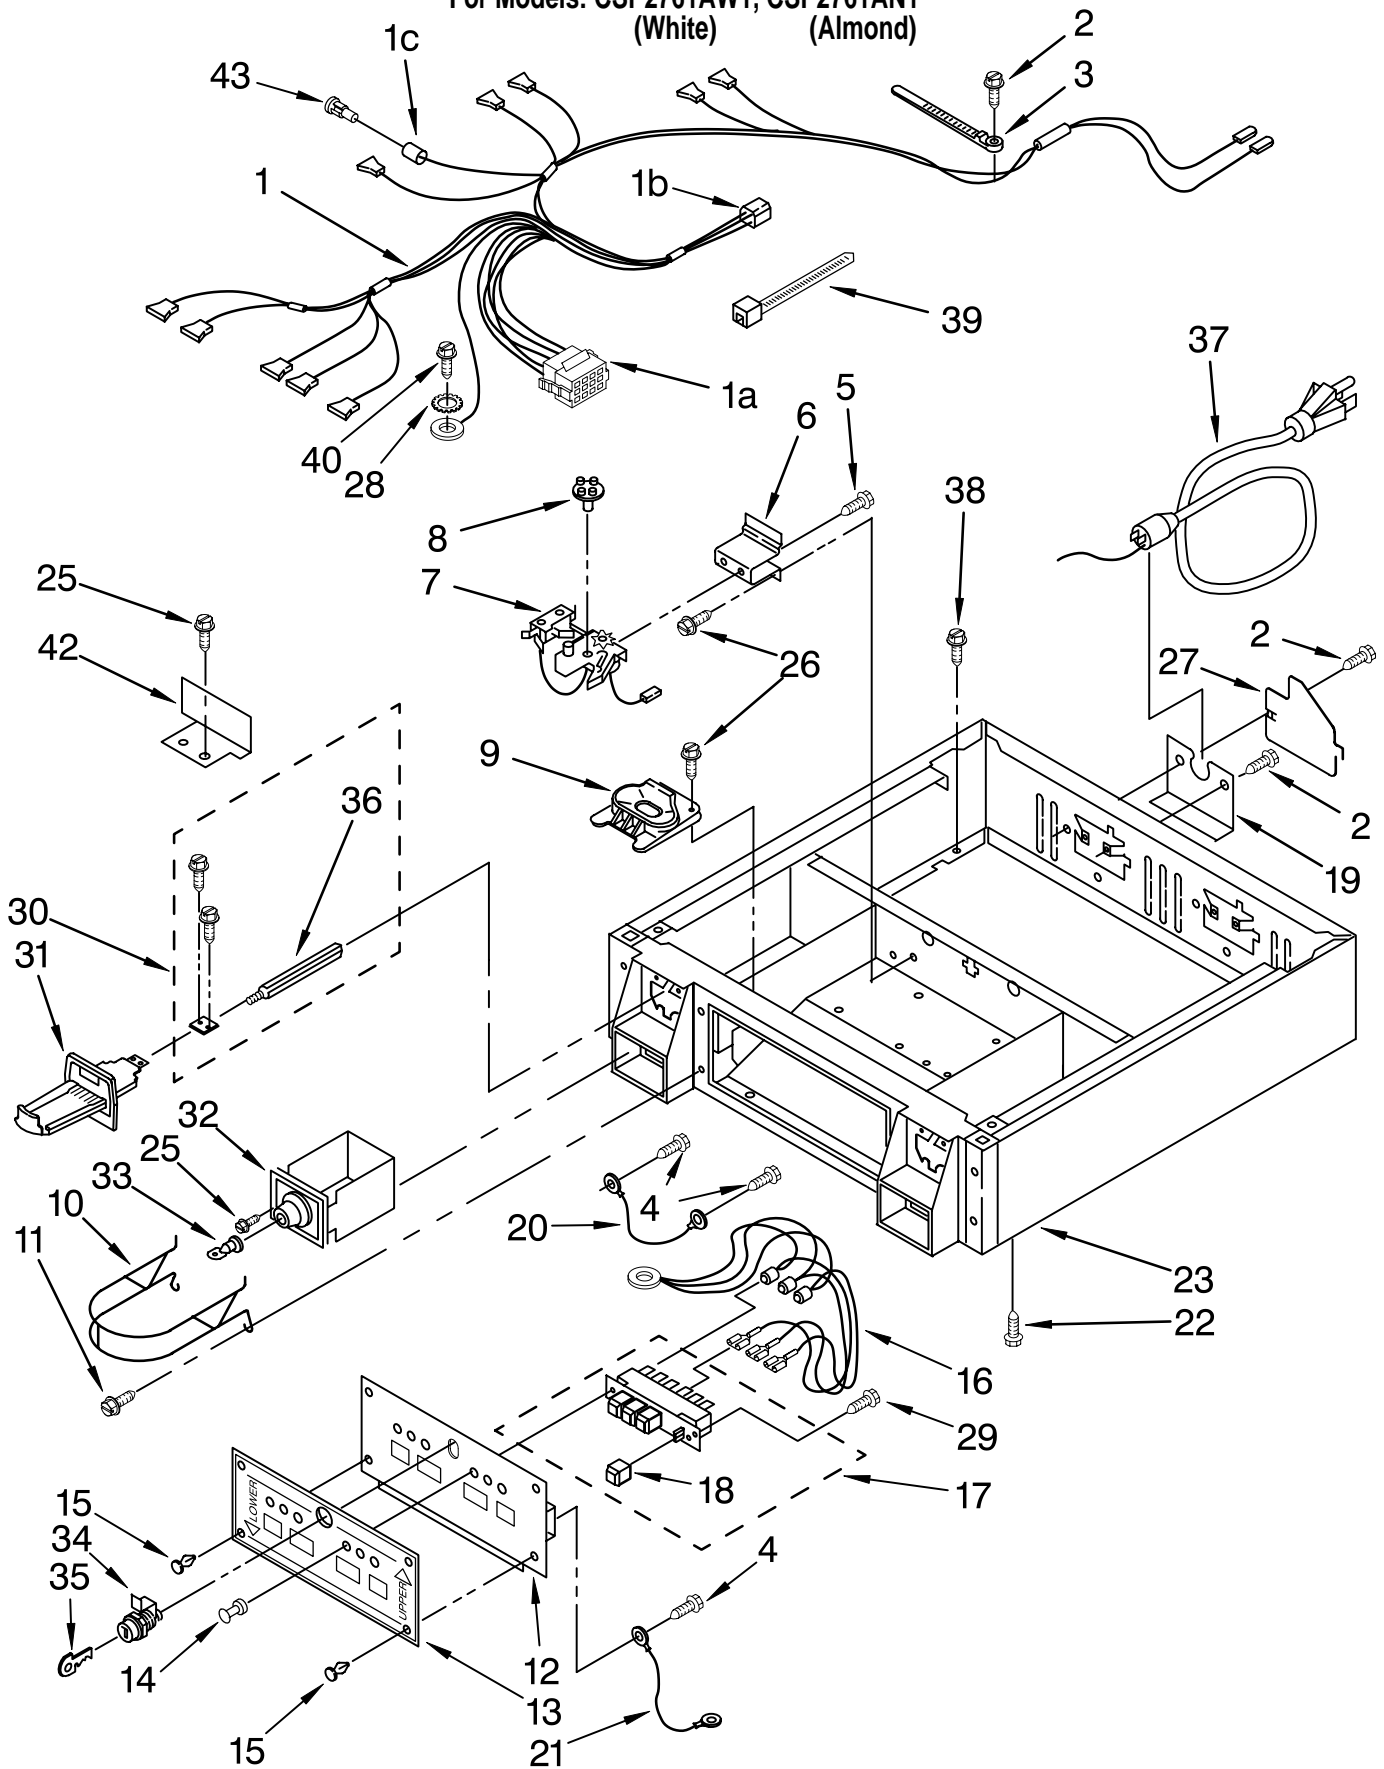

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL AND SEPARATOR PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3401114	Harness, Wire (2)	15	356388	Rivet (4)	30		Slide Extension
1A	385826	Receptacle (2) (Uses Terminals 94614)	16	3401177	Indicator, Light (2)	31		Bag Assembly Slide Mechanism (When Ordering, Specify Number Of Coins And Denomination)
1B	717252	Receptacle, 2-Way	17	3401851	Switch, Pushbutton (2)			
1C	351296	Receptacle	18	3348587	Button, Pushbutton (8)			
2	3400000	Screw, 10-24 x 3/8 (2)	19	3390189	Relief, Strain (2) 10-24 x 1/2	32		Money Box W/Lock Greenwald Abloy Illinois Duo Medeco Cap-Lock Rampart Key (Money Box) (When Ordering Key Specify Vendor Of Money Box Lock)
3	3389969	Tie, Cable	20	3393463	Strut			
4	3392891	Screw, 10-24 x 3/8 (4)	21	340025	Wire, Ground			
5	98139	Screw, 8-32 x 5/16 (4)	22	172455	Bolt, 5-16 x 18 (2)	33		Key (Money Box) (When Ordering Key Specify Vendor Of Money Box Lock)
6	3390115	Bracket, Timer (2)	23		Collar 3401282 White 3401283 Almond			
7	3389668	Timer (Includes 4-Pin Cam) (2)	25	96435	Screw, #10-32 (4)	34		Security Lock & Cam Assembly Key (Service Door)
8		Cam	26	98437	Screw (8)	35		
	3387974	3-Pin (60 Min.)	27	3396795	Cover, Terminal Block (2)	36		Bolt, Slide Mechanism
	339855	4-Pin (45 Min.)	28	3390443	Retainer, Terminal (2)	37	3401402	Cord, Power
	343777	6-Pin (30 Min.)	29	303921	Screw,	38	3393439	Screw, 8-18 x 1/2
9	3389224	Funnel, Coin (2)	*To Order Coin Mechanism Parts Contact Vendor Listed Below *H. Greenwald Company 1340 Metropolitan Avenue Brooklyn, New York 11237			39	3391018	Tie, Cable
10	3389232	Protector, Slide (2)				40	697776	Screw, 10-32 x 1/2
11	342043	Screw, 10-32 x 3/8 (4)				42	3390424	Extension, Slide
12	3389625	Panel, Control				43	351297	Plug
13	3390036	Insert, Decorative						
14	3389520	Lens, Light (6)						


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER CABINET AND FRONT PANEL PARTS

For Models: CSP2761AW1, CSP2761AN1

(White)

(Almond)

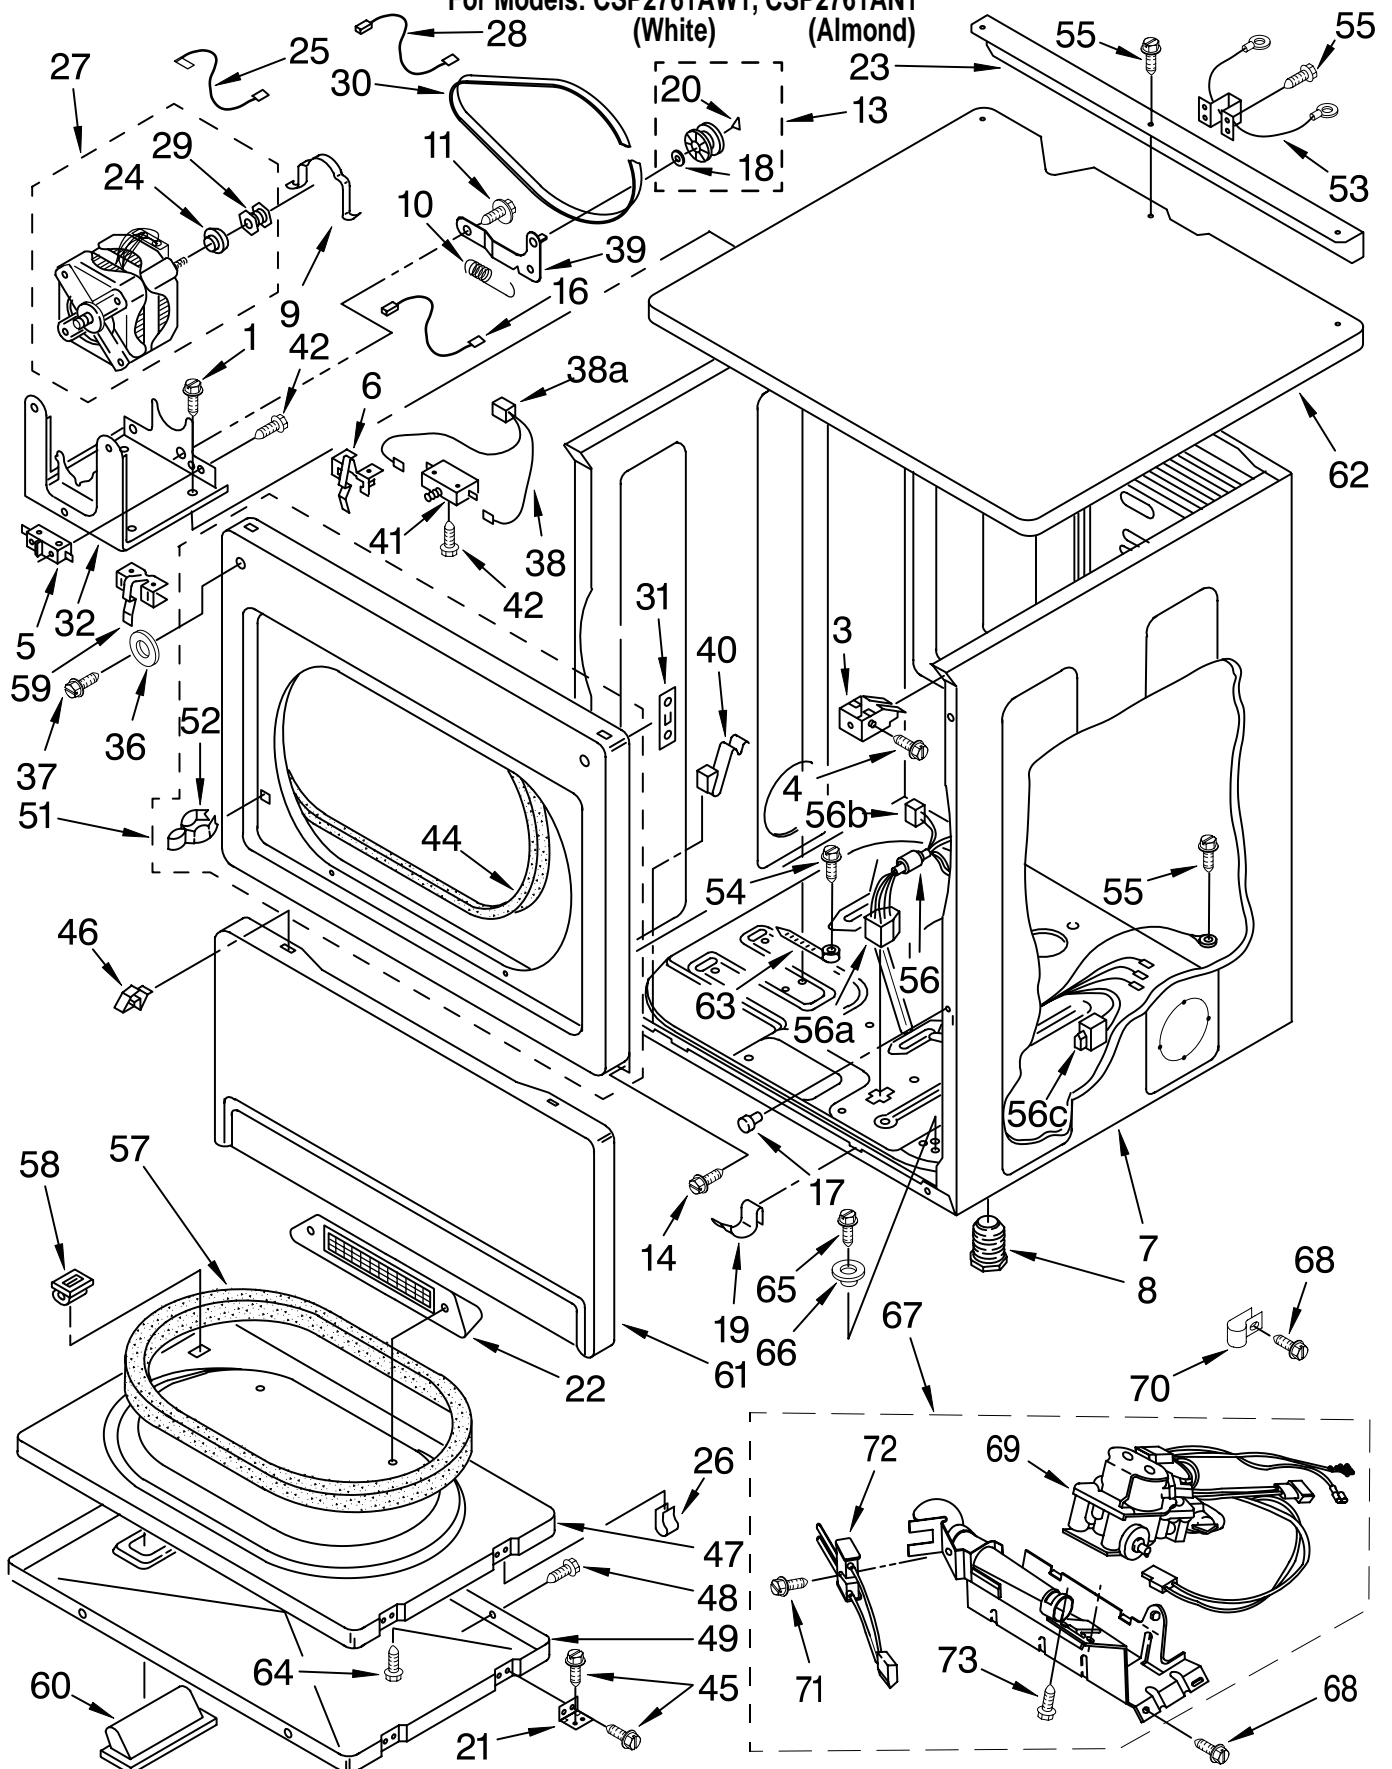


FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER CABINET AND FRONT PANEL PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3390663	Screw, 10-16 x 1/2	36	3392186	Washer	56C	691707	Receptacle, 3-Way (Uses Terminal 94614)
3	3391846	Clip, Front Panel (2)	37	3393008	Screw, 10-16 x 1/2	57	3390735	Seal, Door
4	3393258	Screw, 10-12 x 1	38	3389967	Harness, Door Switch	58	3392538	Catch, Door Assembly
5	3394881	Switch, Broken Belt	38A	717253	Plug, 2-Way (Uses Terminals 94613)	59	3391408	Lever, Snap Switch
6	691581	Lever, Door Switch	39	3388674	Bracket, Idler	60	3389522	White Handle, Door
7		Cabinet (Upper)	40	3388600	Clip, Lint Duct		3389523	Almond Panel, Toe
	3402264	White	41	347207	Switch, Door	61	697215	White Panel, Toe
	3402265	Almond	42	697773	Screw, 6-20 x 7/8		697216	Almond Panel, Toe
8	689172	Foot, Dryer (Plastic) (2)	44	3387242	Seal, Front Panel	62	3389351	White Top (Upper)
9	660658	Clamp, Motor (2)	45	342055	Screw, 10-32 x 1/2		3389352	Almond Top (Upper)
10	3387374	Spring, Idler	46	3388229	Retainer	63	3389969	Tie, Cable
11	3389420	Retainer, Idler	47	3393681	Door, Rear	64	697777	Screw, 11-16 x 7/8
13	3388672	Pulley Assembly	48	694091	Screw	65	172455	Bolt, 5/16-18 (2)
14	3393258	Screw, 10-16 x 1/2	49		Door, Front	66	3389233	Bushing
16	3394081	Wire, Belt Switch		3387872	White Upper Front Panel	67	3401797	Burner Assembly 60 Hz. (Refer To Page 10 For Further Breakdown)
17	693152	Bumper	51	3387873	Almond Upper Front Panel		343641	Screw, 8-32 x 5/8
18	233520	Washer, Thrust		3393081	White Upper Front Panel	68	694054	Valve, Gas (Complete) 60 Hz.
19	297092	Clip (2)		3393082	Almond Upper Front Panel	70	3387561	Clamp, Pipe
20	690997	Tri-Ring	52	696144	Stike, Door	71	3393909	Screw, 8-32 x 5/8
21	3389247	Hinge And Pin (2)	53	3388580	Cable	72	686590	Ignitor
22	3391611	Grill	54	3400000	Screw, 10-24 x 3/8	73	3387057	Screw, 8-18 x 3/8 (3)
23	3393423	Bracket, Angle	55	3390647	Screw, 8-18 x 1/2			
24	3393657	Restrainer, Belt	56	3401105	Harness (Upper)			
25	3398948	Wire, Jumper	56A	3390423	Plug, Multi-Terminal (Uses Terminals 94613)			
26	3389249	Nut, "U" (4)			Upper Front Panel			
27	3395656	Motor Assembly 60 Hz.	56B	717252	Receptacle (Use Terminals 94614 And 94613)			
28	3398948	Wire, Jumper						
29	3389627	Pulley (60 Hz.)						
30	661570	Belt, Drive						
31	3390902	Clip, Door Hinge (2)						
32	3387118	Bracket, Motor						

OPTIONAL PARTS (NOT INCLUDED)

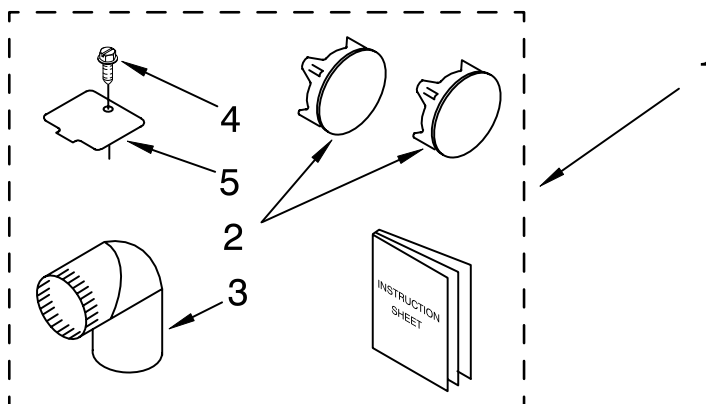


Illus. No.	Part No.	DESCRIPTION
Dryer Exhaust Kit (For Side & Bottom Venting)		
1	279818	White
	279819	Almond
2	697750	Plug, Multivent
	697751	White
3	279731	4"- 90 ° Elbow
4	488729	Screw
5	3389808	Plate, Cover (Bottom Exhaust)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER AND LOWER BULKHEAD PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

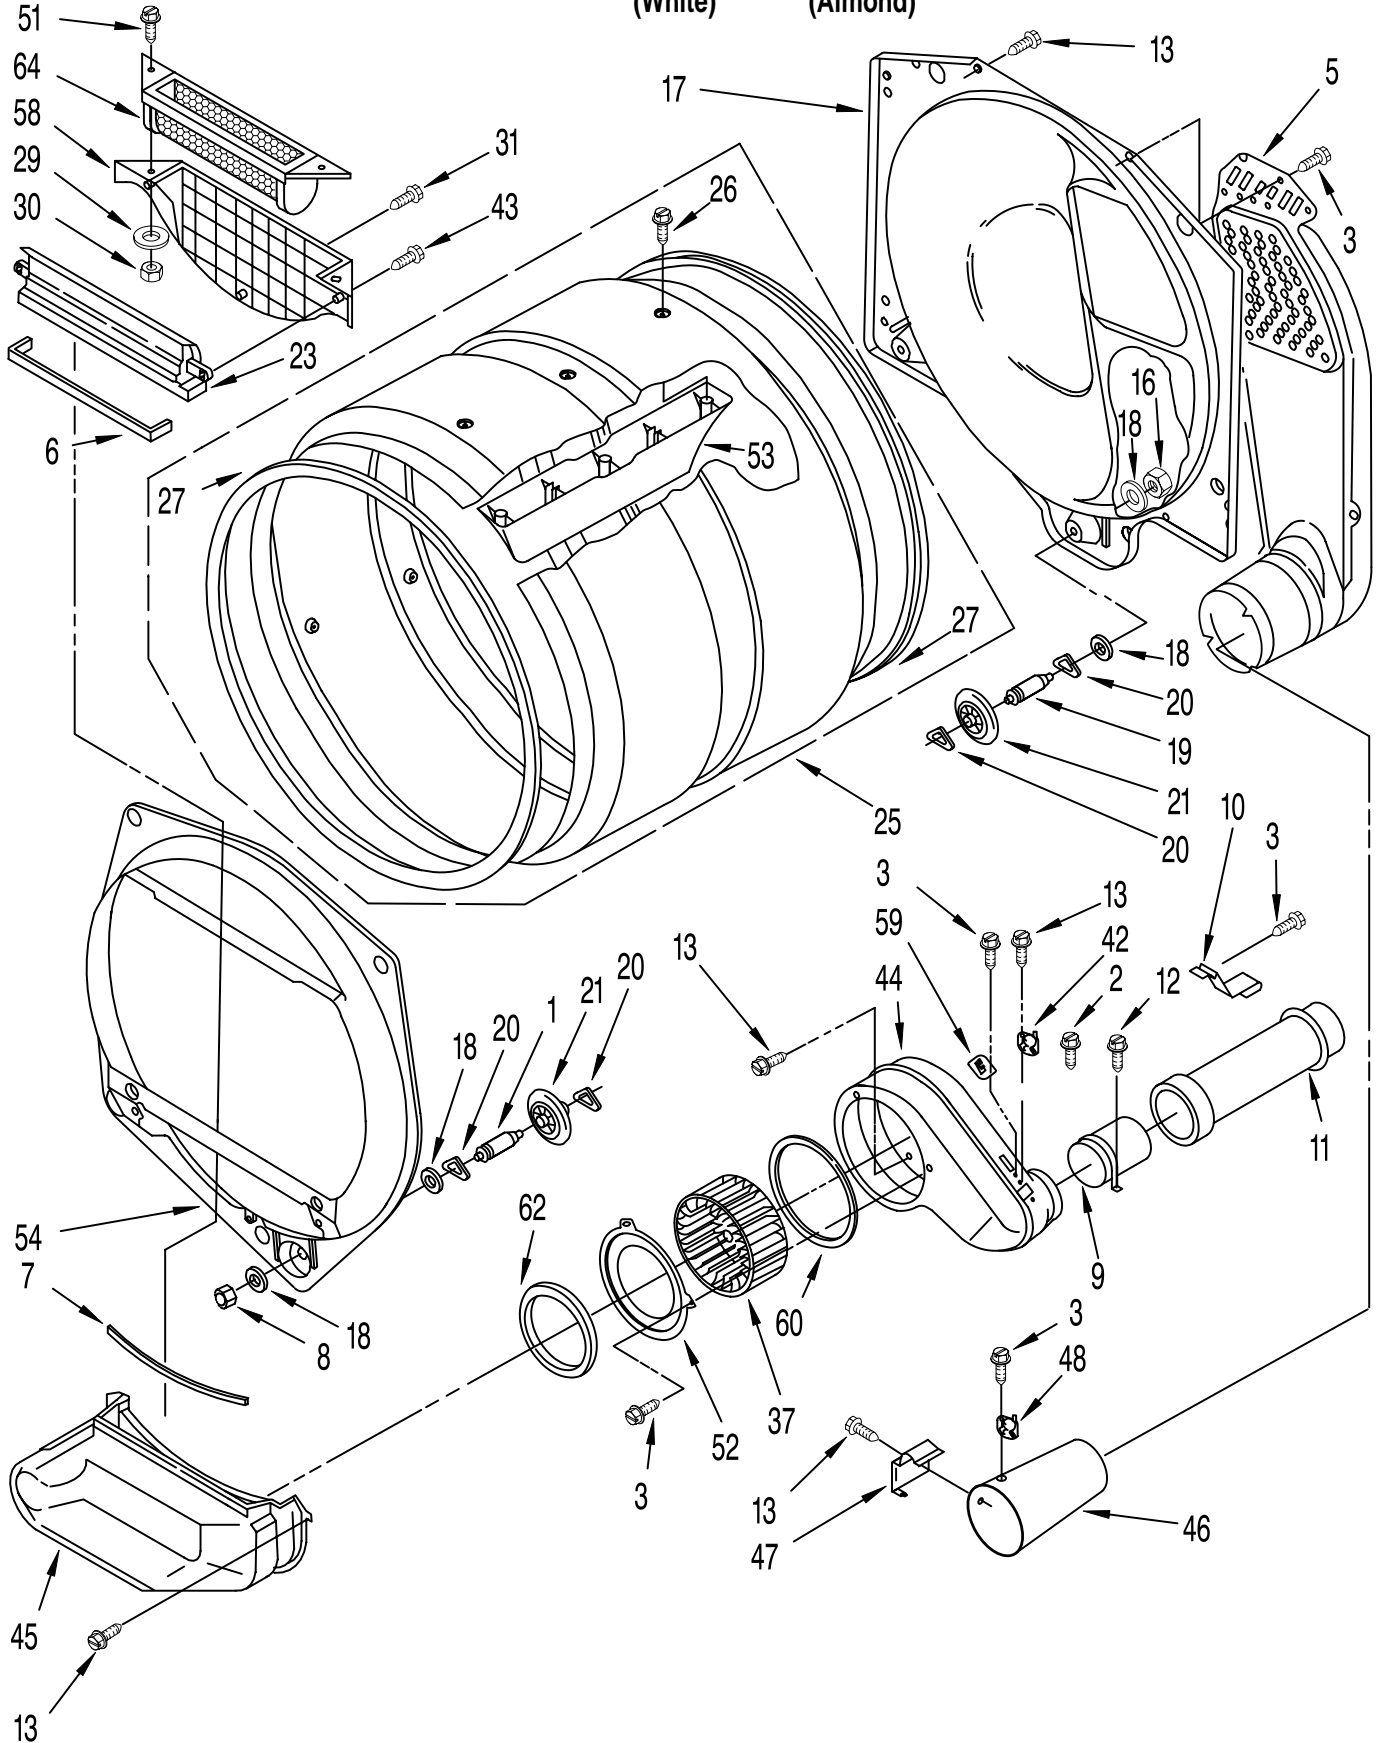

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

UPPER AND LOWER BULKHEAD PARTS

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1	3387460	Shaft, R.H. Thread	17	3389347	Bulkhead, Rear	44	697363	Housing, Blower
2	695240	Screw, 8-18 x 1/2	18	3387459	Washer, Support	45	3390531	Lint Duct Assembly
3	3390646	Screw, 8-18 x 5/16	19	3387707	Shaft, L.H. Thread	46	697757	Funnel, Burner
5	3387259	Air Duct Assembly	20	690997	Ring, Tri	47	338906	Sensor, Radiant
6	697813	Seal, Outlet Housing	21	3396801	Roller, Support	48	3391912	Thermostat 255 ° (124 °C)
7	697814	Seal, Drum Front	23	697768	Housing, Outlet	51	179051	Screw
8	3359452	Nut, 3/8 x 16 (R.H.)	25	3393317	Drum Complete	52	697771	Cover, Blower (Includes Illus. Nos. 60 & 62)
9	3395532	Exhaust Pipe & Bracket	26	697777	Screw, 11-16 x 7/8	53	3393316	Baffle, Drum (3)
10	3395536	Clip, Multivent	27	697694	Seal, Drum	54	3389421	Bulkhead, Front
11	3395997	Extension, Exhaust Pipe	29	3391948	Washer, No. 10	58	3389516	Cover, Lint Screen
12	3390814	Screw, 8-18 x 3/8	30	120614	Nut, Hex	59	3390719	Thermal Fuse
13	3390647	Screw, 8-18 x 1/2	31	695240	Screw, 8-18 x 1/2	60	697770	Seal, Cover Plate
16	3387709	Nut, 3/8-16 (L.H.)	37	697772	Wheel, Blower	62	697769	Seal, Lint Duct
			42	3387138	Thermostat, Internal-Bias 341146 (Alt.)	64	3389510	Screen, Lint
			43	3387230	Screw, 10-16 x 3/4			

LITERATURE AND OPTIONAL PARTS

Illus. No.	Part No.	DESCRIPTION
------------	----------	-------------

LITERATURE PARTS

LIT3395339	Instructions, Installation
LIT3401133	Label, Wiring Diagram

PAINT, TOUCH-UP (1/2oz.)

72017	White
72107	Almond

PAINT, PRESSURIZED SPRAY (13 oz.)

350930	White
350956	Almond
350938	Primer, Gray


PAINT, BULK (1 qt.)

*799344	White (Uncut)
*978883	Almond (Uncut)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3401797 BURNER ASSEMBLY

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

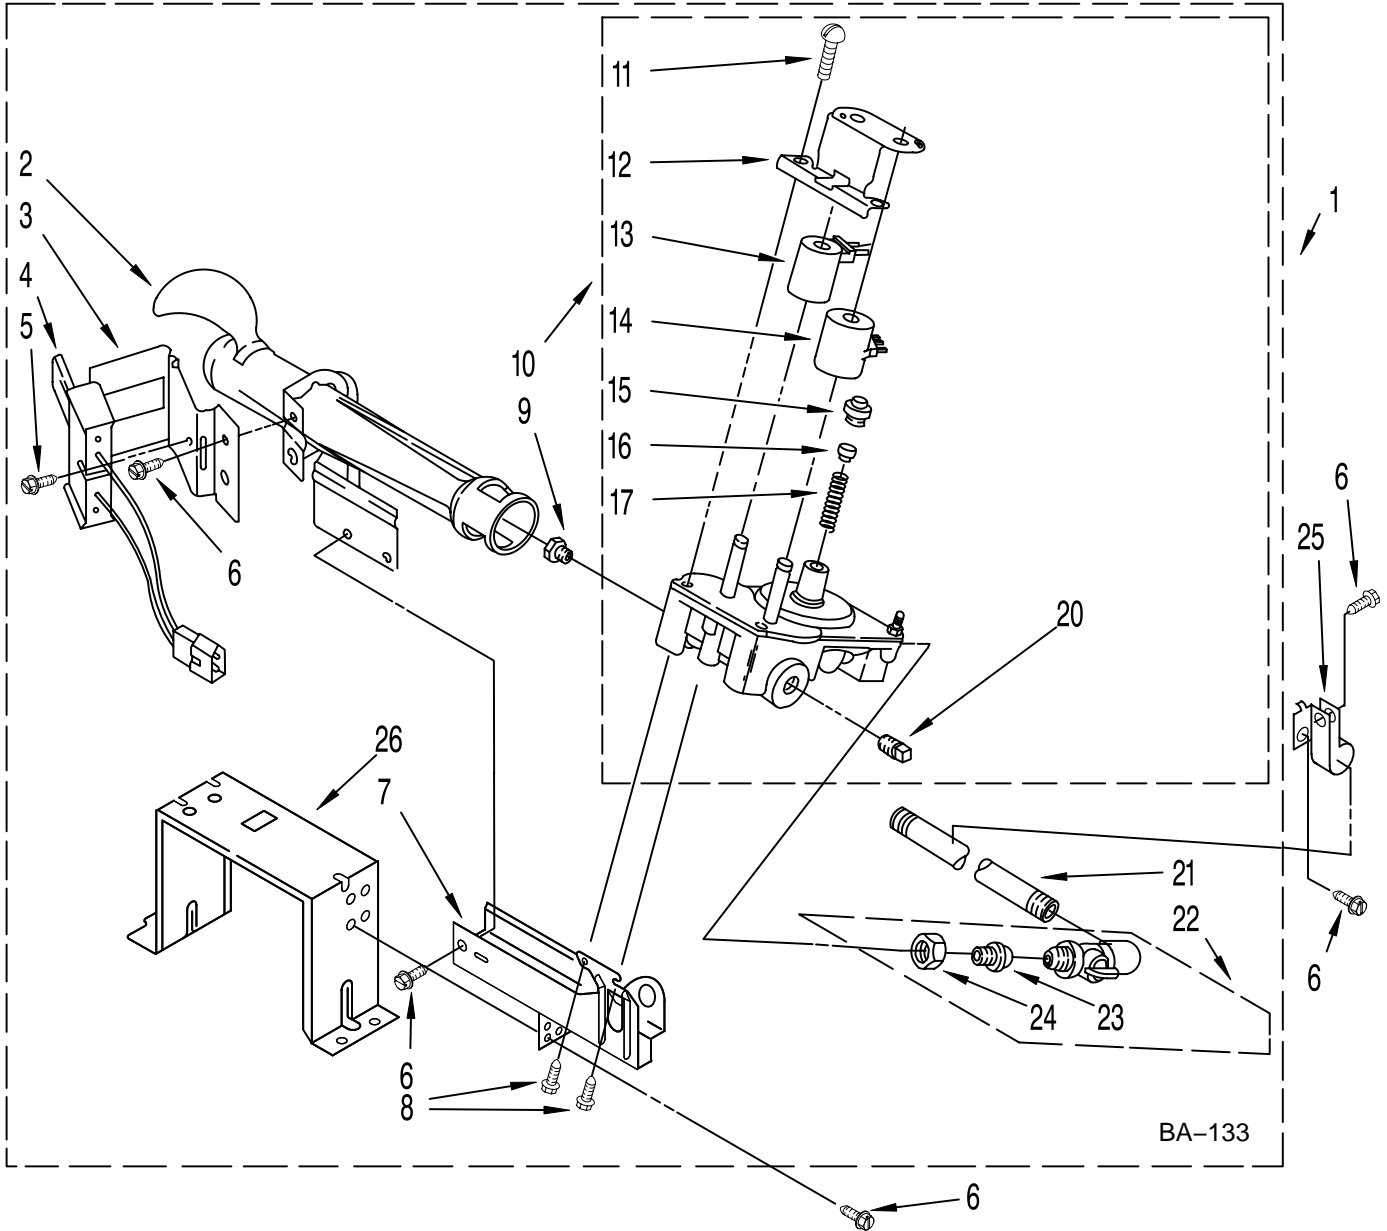

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

3401797 BURNER ASSEMBLY

For Models: CSP2761AW1, CSP2761AN1
(White) (Almond)

**USE WITH TYPE 1 – NATURAL, TYPE 2 – MIXED,
AND TYPE 4 – LIQUEFIED PROPANE AND BUTANE GASES**

Illus. No.	Part No.	DESCRIPTION
1	3401797	Burner Assembly 60 Hz. (Type 1, 2 & 3) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8–32 x 5/8)
6	343641	Screw, 10–16 x 1/2
7	3389871	Base, Burner
8	3387057	Screw, 10–16 x 1/2 (3)
9		Orifice, Burner
	3397656	Type 1
	15775	Type 2
10	3401775	Valve, Gas 60 Hz. (Complete)
11	694421	Screw, 8–32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak, Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
18	694426	Harness, Wiring (Complete)
19	694510	Clip, Harness
20	239822	Plug, Pipe
21	3387224	Pipe, Gas Supply
22	697441	Valve & Union Shut–Off
23	3393767	Pipe, Tail
24	233076	Nut, Compression
25	3387561	Clamp, Pipe
26	3389889	Bracket, Support

Following Parts Not Illustrated

694572 Conversion Kit
(Type 1 and 2)
to Type (4) L.P.G.

BA–133